

INSTALLATION GUIDE

AlphaSorb® Fabric Wrapped Acoustic Panel Value Pack


The following installation instructions are given as a general guide to avoid common errors. Installer should follow best practices for construction and workmanship. Acoustical Solutions bears no responsibility for installation or contractor selection. Please contact a sales representative if you have questions, concerns or specific project requirements.

Be sure to inspect materials upon delivery. Please note any damage on the delivery ticket and notify Acoustical Solutions immediately. Materials should be stored in original packing in a clean, climate controlled environment free of moisture. Installation should not commence until building is enclosed and under standard occupancy conditions and surfaces are of acceptable condition and properly prepared. Do not install materials of unacceptable quality.

General Guidelines

- For best results, install this product at the end of your construction project.
- Ensure areas are free from dirt and debris.
- Handle panels with care to avoid damage.
- Use clean gloves to prevent soiling of material.
- Maintain a uniform temperature and humidity prior to, during and after installation.

Mounting Detail

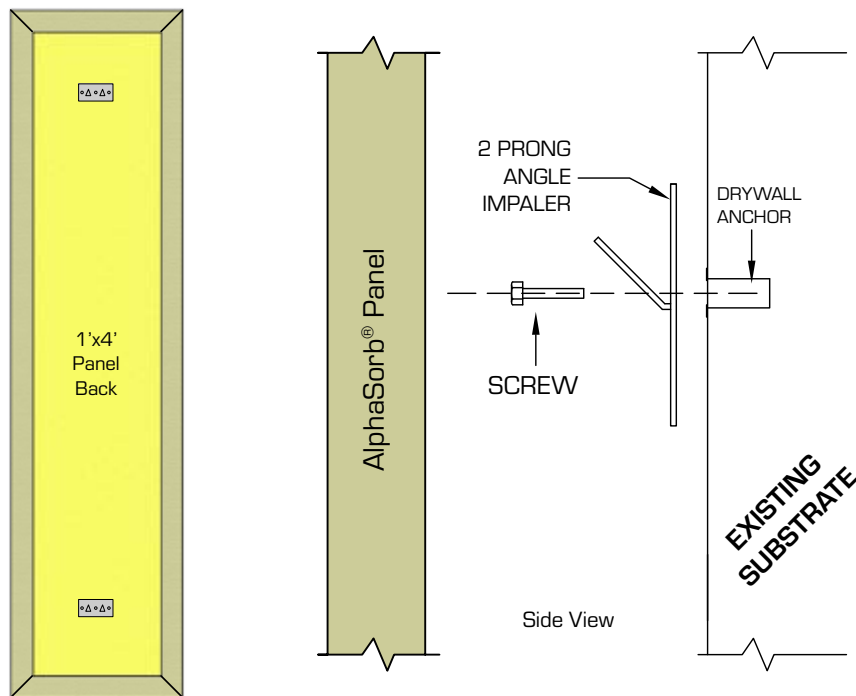


Revised: 2025-04-30

INSTALLATION GUIDE

AlphaSorb® Fabric Wrapped Acoustic Panel Value Pack


1

Determine your panel layout and the location where each panel will be mounted to the wall. Lightly mark the location of the top, bottom, left and right edges of the panel.

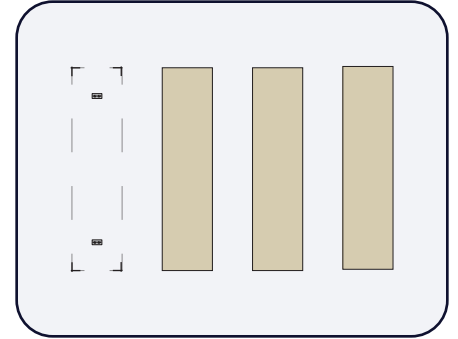


2

Mount the two prong angle impaler to the wall using the provided screws and drywall anchors. Impaler should be set in six inches from the outer edge of the panel to avoid the fabric on the back. The impaler should remain in the horizontal position shown below with the angled tips pointing upward.

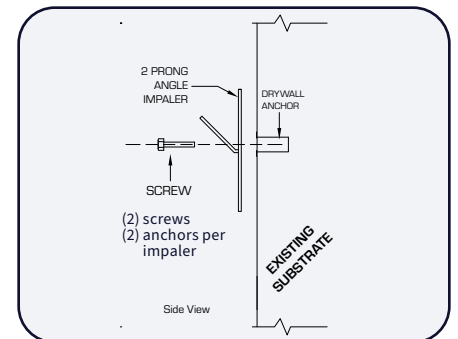

3

Line up the panel about $\frac{3}{4}$ " above the marks on the wall. Carefully push panel downward at a slight angle onto the impaler until the panel is flush with the wall. Verify panels are straight and plumb with a level. Repeat process for multiple panels. For a secure, permanent installation, construction adhesive may be applied to the back of the panel prior to mounting. Adhesive is highly recommended for high traffic areas.

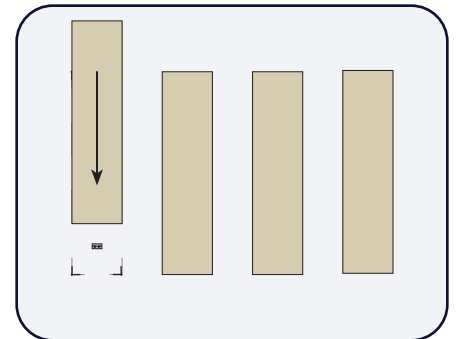

Revised: 2025-04-30