


# ClearSonic AmpPac



1

Stand acrylic panels up in a zigzag formation.  
Peel off paper masking.

**Note: this product is NOT returnable once  
paper masking is removed.**

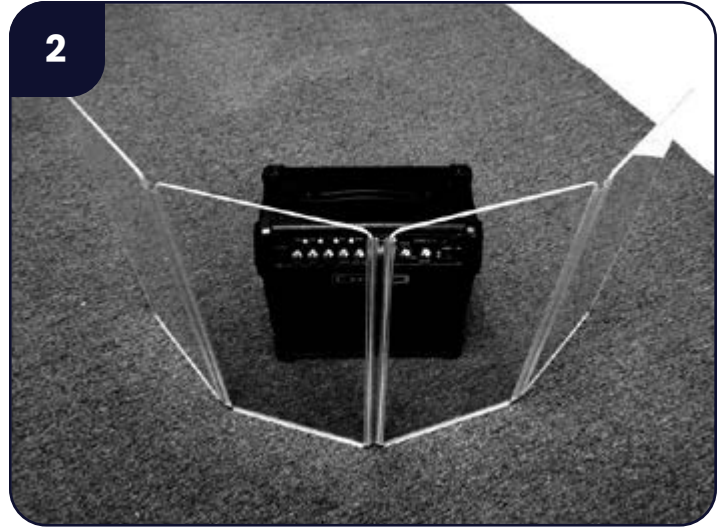

2

Place acrylic panels in semi-circle around amplifier.



3

Attach S2 SORBER baffles together with included Velcro®



4

Place SORBER baffles behind amplifier with the edges  
meeting the acrylic panels and your AmpPac is done!

# ClearSonic AmpPac



***For AmpPacs with lids:***

Place larger SORBER baffle lid on top so the front rests on the acrylic panels and the back rests on the S2 SORBER baffles.


There should be a small gap in the back to allow for air circulation.

Your AmpPac is now complete!

Revised: 2025-04-30

## INSTALLATION GUIDE

# ClearSonic AmpPac

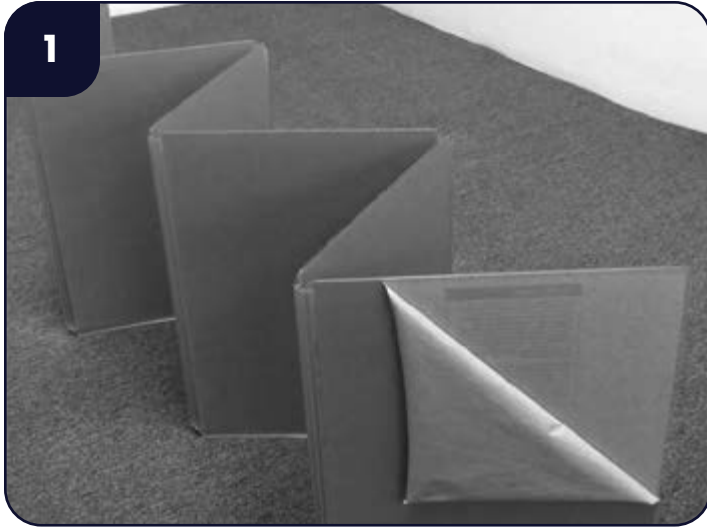


Stand acrylic panels up in a zigzag formation.  
Peel off paper masking.

**Note: this product is NOT returnable once paper masking is removed.**



Set acrylic panels around amplifier in the shape of a hexagon so that the two edge panels meet each other in the back..

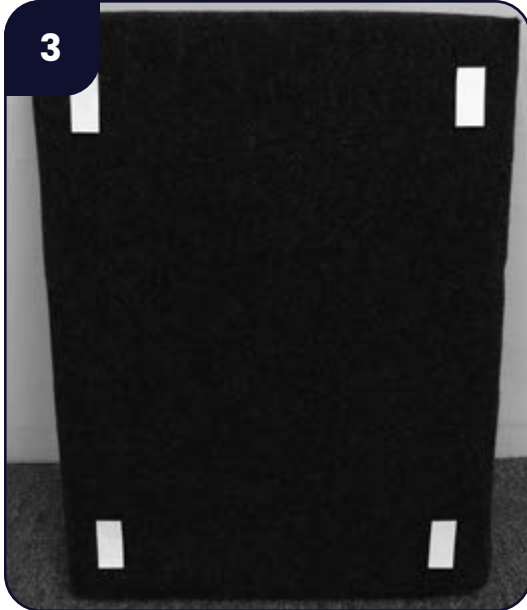

Place four (4) pieces of included Velcro® on each S1 SORBER baffle about 1 inch from each corner. Once the Velcro is placed, peel the masking off to expose adhesive backing.



Place each S1 SORBER baffle in position on the acrylic shield (1 baffle per panel). Apply pressure from both sides to get Velcro to stick. Once all the SORBER panels are in place your AmpPac is ready to rock!

Revised: 2025-04-30

# ClearSonic AmpPac



***For AmpPacs with lids:***

Set larger S3 SORBER baffle on top. There should be small gaps in front and back to promote air circulation.

Your AmpPac is now complete!

Revised: 2025-04-30