


PrivacyShield® Desktop Partition

Step 1:


Carefully remove from packaging and lay flat. Please note piece and slot names of items in the diagram below.

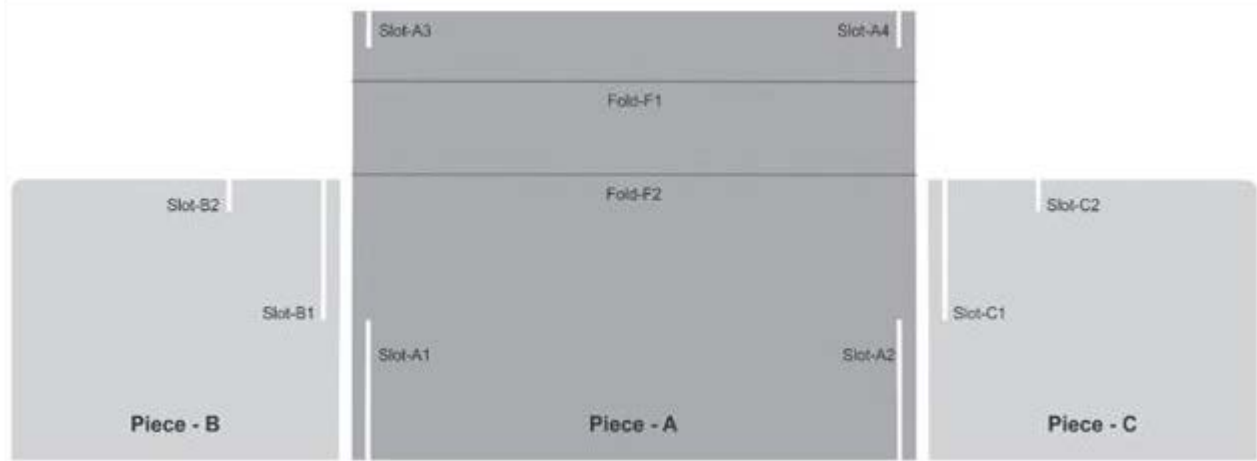

Keep all the pieces on the surface


Step 2:

Insert Slot A1 of Piece A into Slot B1 of Piece B

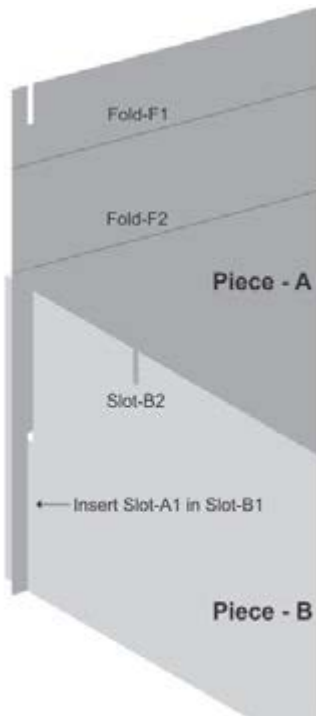

Step 3:

Insert Slot A2 of Piece A into Slot C1 of Piece C

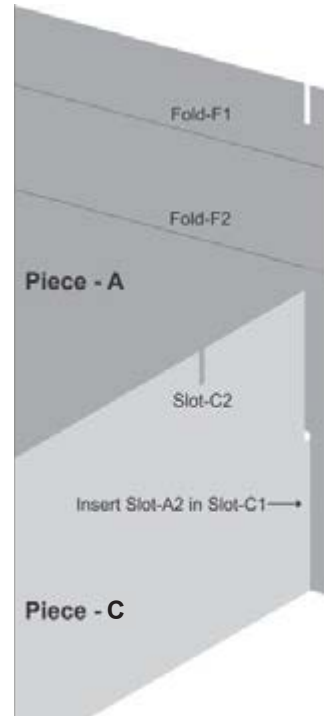


Revised: 2025-04-30

PrivacyShield® Desktop Partition


Step 4:

Fold top of Piece A at Fold Marks labeled F1 and F2 and insert Slot A3 into Slot B2.

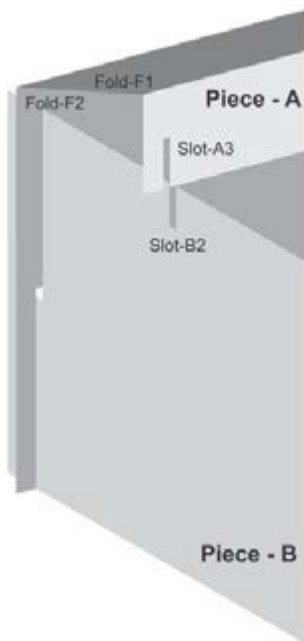


Step 5:

Insert Slot A4 of Piece A into Slot C2 of Piece C

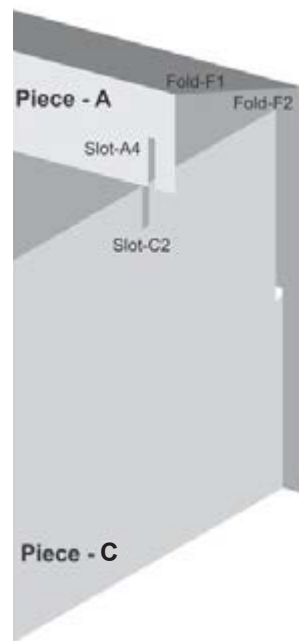

Step 6:

Ensure all panels and slots meet correctly at right angles and place assembled piece where desired.

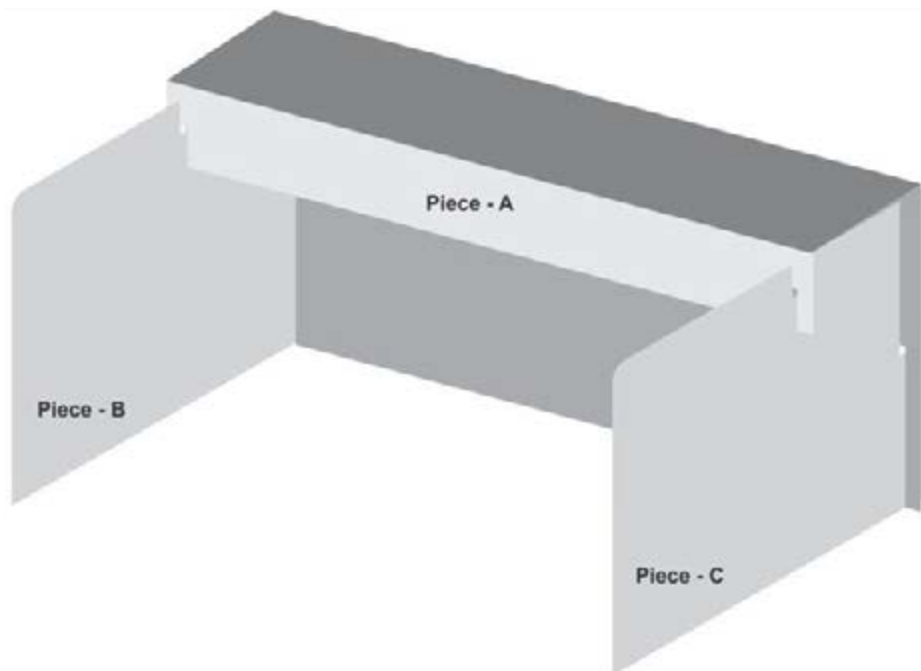

Revised: 2025-04-30