



CUTTING INSTRUCTIONS

PrivacyShield® Soundproofing Blankets


ABSC & AQFA Series

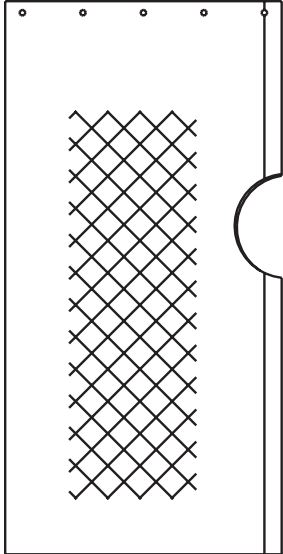

1. Cut Panels with a utility knife or heavy duty shears to fit as snug as possible, keeping gaps to a minimum.

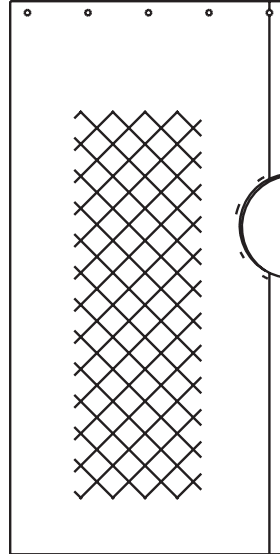


2. Compress the material at the edge of the cut out by placing a few staples around the perimeter of the cut.

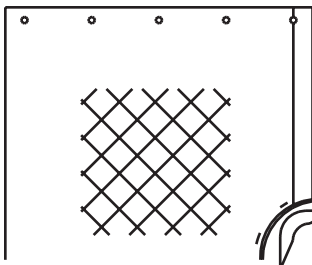

3. Fold edge binding material over edges, equal amounts on front and back.

Edge Binding Material

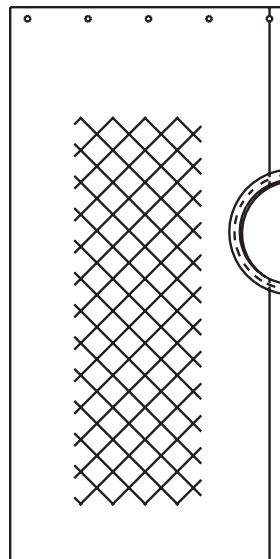

4. Staple edge binding material to panel using staples every 2-3 inches.


Please Note: These installation instructions are given as a general guide to avoid common errors. Installer should follow best practices for construction and workmanship. Acoustical Solutions bears no responsibility for installation or contractor selection. Please contact a sales representative if you have questions, concerns or specific project requirements.

Revised: 2025-04-30


CUTTING INSTRUCTIONS

PrivacyShield® Soundproofing Blankets


ABBC Series

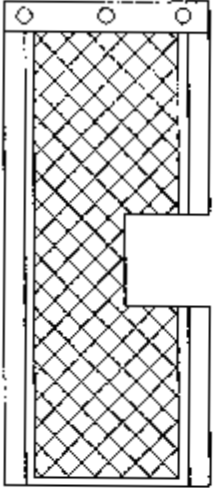


1. Cut through quilted fiberglass and barrier with a utility knife or heavy duty shears to fit as snug as possible, keeping gaps to a minimum.

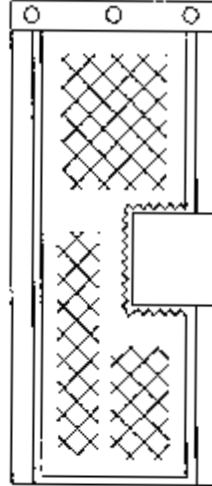

2. Cut quilted fiberglass only back and additional inch from the outer edge of the cut barrier.

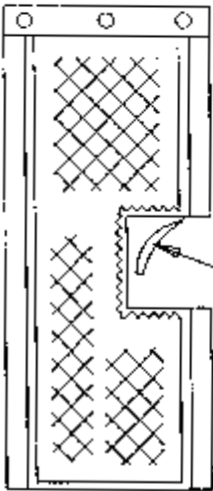

3. Fold edge binding material over cut edge of quilted fiberglass, equal amounts on front and back.

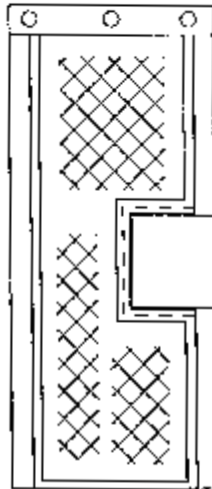

4. Staple edge binding material to quilted fiberglass with staples every 2-3 inches so that the staples are not seen on the barrier side.

Revised: 2025-04-30