

## INSTALLATION GUIDE

# Rotofast Polyester Snap On Anchor with Z-Clips




Measure and mark the location where panel will be placed and mark the orientation on the back of the panel.



Make a cut about 1-½" long by ¾" deep at each anchor location. It may take a few passes to complete the cut.



Screw Rotofast Snap-On Anchors into back of the panel using the Rotofast driver tool. Do not over-tighten.

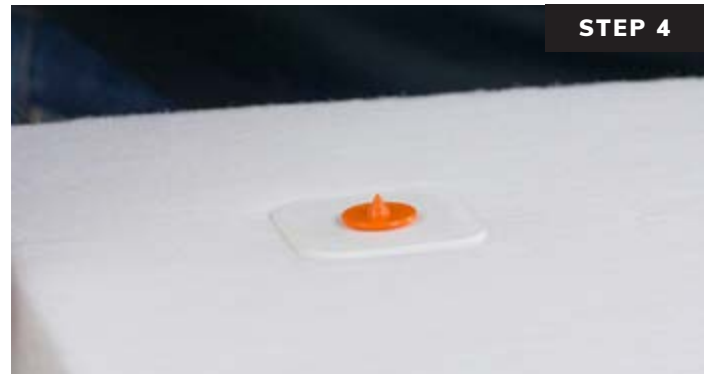

Insert reusable marking plugs into the Rotofast Snap-On anchors.


Revised: 2025-04-30

## INSTALLATION GUIDE


# Rotofast Polyester Snap On Anchor with Z-Clips



Push panel against wall to mark anchor locations.

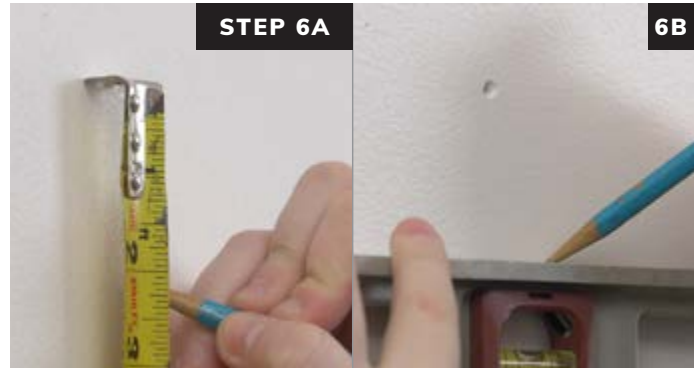

Measure down 2" from each mark. Use a level to make a short line at this location.

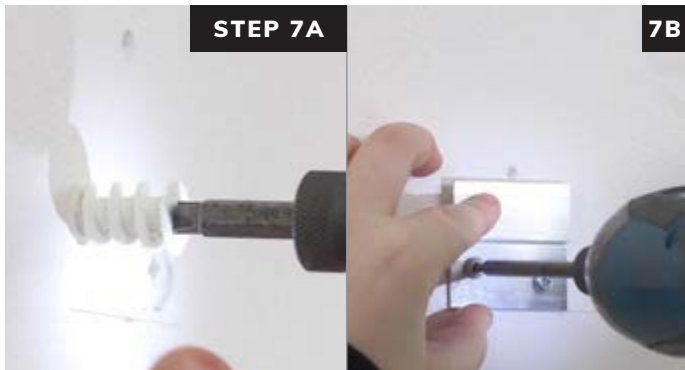

Install each Z CLIP at these locations with the bottom of the clip lined up with the line you made.



Line up the panel. Slide down until you feel the flange contact the top of the Z CLIP. Push in on the panel and slide it down to engage the Z CLIPS. Make sure all clips are engaged to complete installation.

Revised: 2025-04-30